



# Rainfall Shower

## Assembly & User Manual

---

## 1. BEFORE YOU START



**IMPORTANT! READ THIS SECTION ENTIRELY BEFORE PROCEEDING WITH INSTALLATION.**

---

### SAFETY

---

1. Read and follow all instructions carefully.
2. When installing, basic safety precautions should always be followed.
3. Do not allow children to use the shower unless they are closely supervised at all times.
4. Do not attempt to connect hot water to the shower.
5. Cleaning chemicals & water may cause the base to become slippery when wet, take extra caution when showering.
6. Some parts may have sharp edges, wear PPE if required.

---

### CAUTIONS

---

1. Avoid allowing dirt, spider webs and other environmental debris to build up.
2. Do not use cleaning chemicals which are not stated in the maintenance & cleaning section, unless it has been recommended by Alpine Spas.
3. Do not use a hard bristled brush to clean the shower & base.

---

### INSTALLATION REQUIREMENTS

---

1. Install the shower on a hard, level surface.
2. Sufficient drainage should be considered when deciding where to install your shower.
3. We recommend two people to assemble the shower.
4. Avoid using chemicals when showering to avoid environmental damage.
5. Wear safety gloves to prevent injury from potential sharp edges.
6. Be sure to install the base rubber corner guards to prevent injury.
7. If you intend on installing the shower directly onto a level fixed surface, make sure the decking or concrete is reinforced before commencing.



### TOOLS REQUIRED

You will need the following tools to assemble your Rainfall Shower.



**PHILLIPS SCREWDRIVER  
(INCLUDED)**



**18mm SPANNER**



**23mm SPANNER**




**ADJUSTABLE  
SPANNER  
(OPTIONAL)**

### PARTS LIST

- A** ..... Shower Frame
- B** ..... Rear Frame Cover
- C** ..... Frame Cover Screw x12
- D** ..... Male Hose Connector & Filter
- E** ..... Tap, Washer & Nut
- F** ..... Tap Adapter
- G** ..... Shower Base
- H** ..... Rubber Washer
- I** ..... Rectangle Metal Washer
- J** ..... Base Mounting set (Bolt & Nut) x4
- K** ..... Masonry Mounting Bolt set (Bolt, Sleeve, Split Washer, Washer & Nut) x4
- L** ..... Rubber Corner Guards x4




OVERVIEW

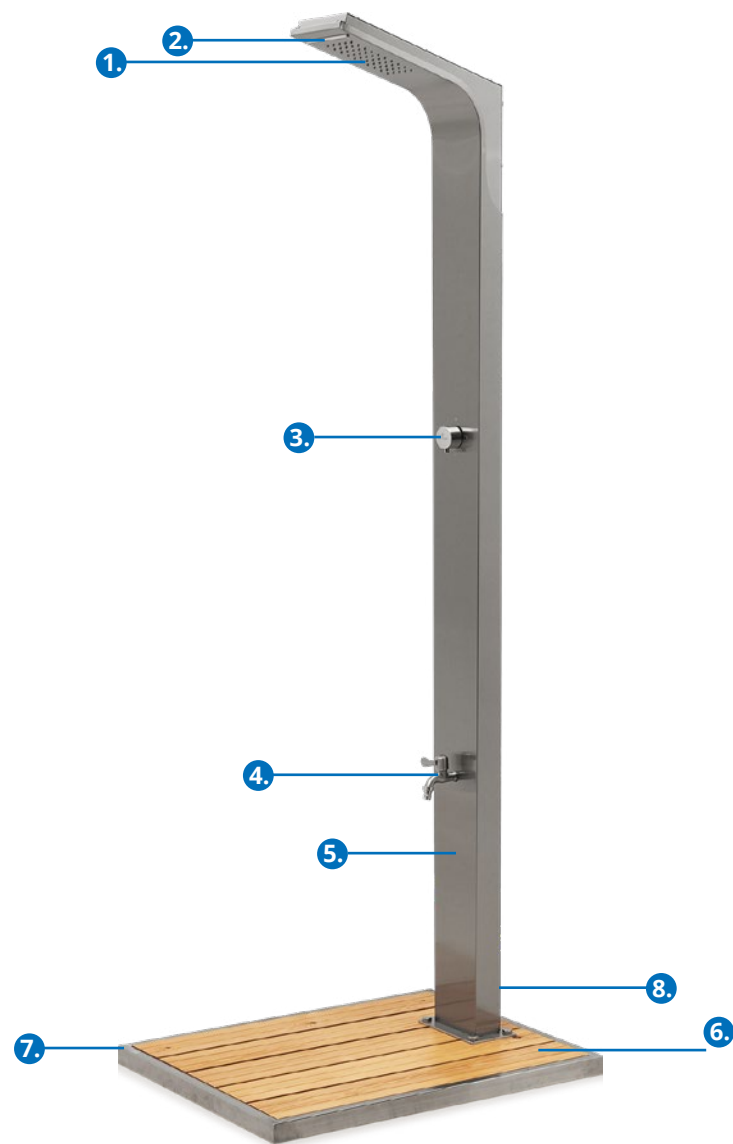


- 1 ..... Shower Rainfall Head
- 2 ..... Shower Waterfall Head
- 3 ..... Adjustable Flow Dial
- 4 ..... Tap
- 5 ..... Shower Frame
- 6 ..... Shower Base
- 7 ..... Rubber Corner Guards
- 8 ..... Hose Connector




1. Install the 'Shower Frame' to the 'Shower Base' using the supplied 'Base Mounting bolts & Nuts' and the 'Rectangle Metal Washer' using the 18mm spanner.

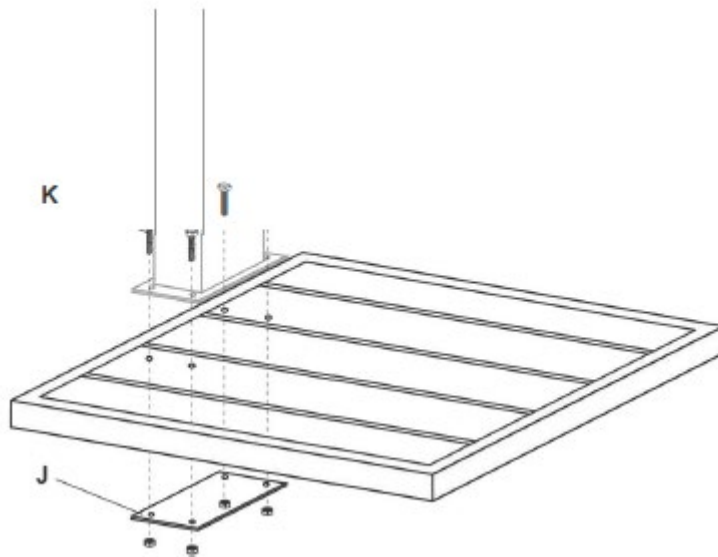

2. With the 'Rear Frame Cover' off, install the 'Tap, Washer & Nut' and tighten using the 23mm spanner. Make sure the tap is not on an angle.

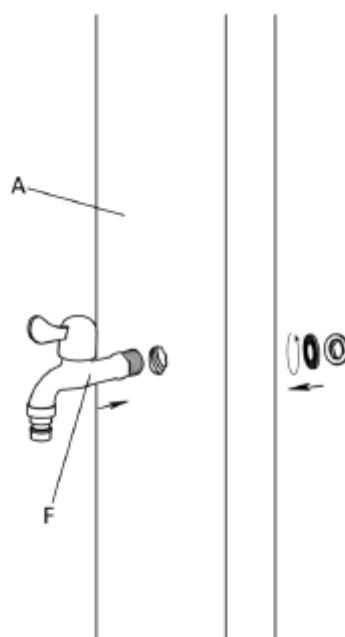


3. Insert a rubber washer into the brass connector and secure it to the back of the 'Tap' using the 23mm spanner. Hold the 'Tap' while tightening.

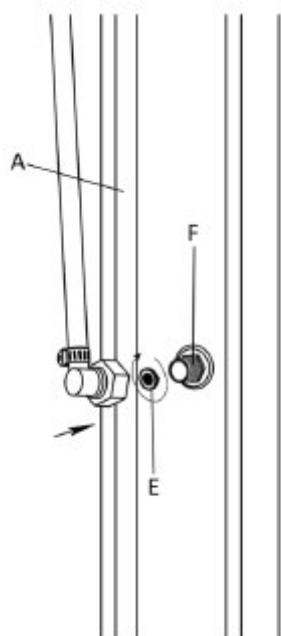


4. Secure the top of the 'Rear Frame Cover' using 2 of the 'Frame Cover Screws', making sure the hose adaptor hole is located at the bottom. Then secure the 'Hose Adaptor' in the hole using the 23mm spanner. Install the large rubber washer on the outside of the 'cover'.


Install a small rubber washer into the metal hose connector and then secure it to the 'Hose Adaptor' using the 23mm spanner. Insert the filter into the 'Male Hose Connector' and screw it onto the 'Hose Adaptor'.

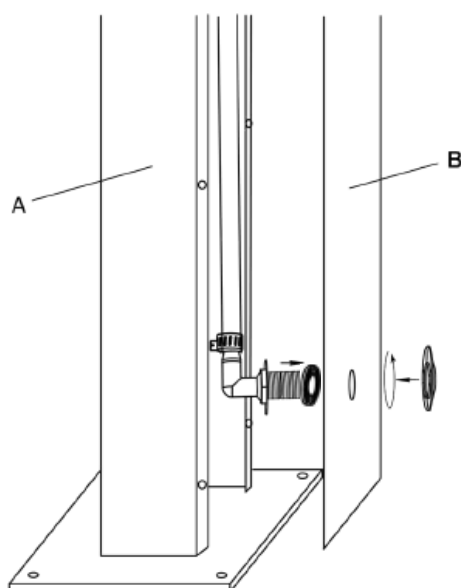

5. Continue to secure the 'Rear Frame Cover' onto the frame using the 'Frame Cover Screws'.

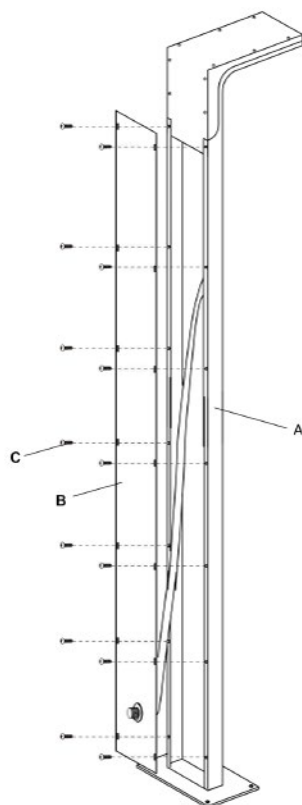

6. If required, use clear silicone to secure the 'Rubber Corner Guards' to the metal corners on the 'Shower Base'.

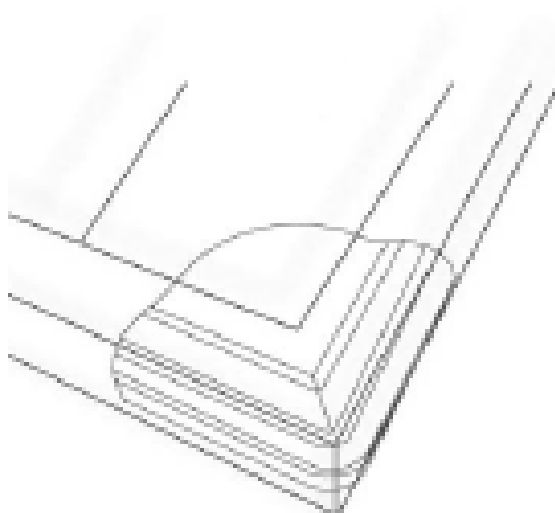

---

## USER GUIDE

---

### Connecting Water

Once you have finished assembling the shower, simply attach your garden hose connector to the water supply, then connect the other end of your hose to the Shower hose fitting. Turn the tap on and your shower is now ready to use!




### Using your Shower

After connecting the water supply, use the 'Adjustable Flow Dial' to divert water to the 'Rainfall Shower Head', 'Waterfall Shower Head', 'Tap' or OFF.




To utilize the tap, simply rotate the 'Adjustable Flow Dial' to the tap icon, then turn the 'Tap' handle to open the water flow.

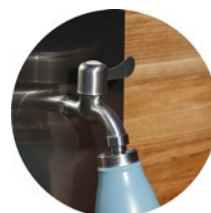

Once you have finished using the shower, it is advised to turn the water off from the water supply.

### Cleaning & Maintenance

Maintain the luxury look of your shower by wiping it down weekly to prevent build up of water marks and dirt. Use a soft microfibre cloth with a mild soap & water mixture to gently clean any water marks, dirt & cobwebs off the shower.

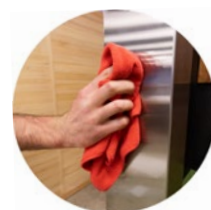

For stubborn water stains, spray white distilled vinegar onto the affected area. Leave it for several minutes before wiping it off with a microfibre cloth.

Depending on the quality of your water supply, lime scale or calcium may build up on the shower head and affect its performance. Mix lemon juice & white distilled vinegar in a spray bottle. Generously spray the affected area and leave it for 15 minutes to work its magic. Wash it off with a microfibre cloth & water.

For tough stains repeat the process and scrub the area with an old tooth brush after 15 minutes of soaking.





## Notes

## Notes



## Notes



---

## CONTACT INFORMATION

---

If you need assistance, please get in touch via phone or email.

**service@alpinespas.co.nz**

**0800 99 33 88**

**service@alpinespas.com.au**

**1800 99 33 88**

For a digital copy of this guide and also the outdoor sauna user guide visit:

<http://alpinespas.co.nz/support/>

OR

<http://alpinespas.com.au/support/>